

OZZ WR2 65

88507

Before installation

1. Check the local laws and regulations for auxiliary lights in the region your vehicle may travel to, before installation. Ensure they are compliance.
2. Read all installation instructions.
3. Make sure the dimension and weight of the lamps and device are matched to your vehicle, see figure 1.
4. Slight moisture inside may occur, it will be removed from the vent after 2-4 time working.
5. Working Voltage: 10-32V DC.

Mounting

1. Determine the installation location, use a 11 mm drill 1 or 3 holes, lock nut tightening.
2. Use the stay bar if it is needed for stabilization.

Wiring Connections and Functions

1. Wiring connections

Black: Ground, -
Red: Flood Light on road (E-mark), +
Yellow: R65 function, +
White: Warning pattern switch and synchronization, -
Blue: Red position light, +

2. Wiring Harness 40A relay, 30A fuse.

Figure 1

