

# OZZ SQR 5"

88509 (black)

## Before installation

1. Check the local laws and regulations and the region your vehicle may travel to for Auxiliary light before installation, ensure they are compliance.
2. Read all installation instructions.
3. Make sure the dimension and weight of the lamps and device are matched to your vehicle. See figure 01.
4. Slight moisture inside may occur, it will be removed out from the vent after 2-4 time working.
5. Working Voltage: 9-32V DC.

## Mounting

1. Place the nut on the bolt and hand-tighten it to hold the light in place. Use a wrench to fully tighten the nut, ensuring the light is securely mounted.
2. Connect black cable to ground (-).
3. Connect red cable to positive (+).
4. To synchronise multiple units (max 10 pcs) connect the white cables together, and keep connected otherwise units will fall out of sync.
5. To switch between day and night mode, apply the white cables to positive (+) for 1 second, and then release.

## Wiring connections & Functions

Black: Ground-  
Red: Flood light, +  
White: Synchronization, +  
Yellow: Warning light, +

**Figure 01**

